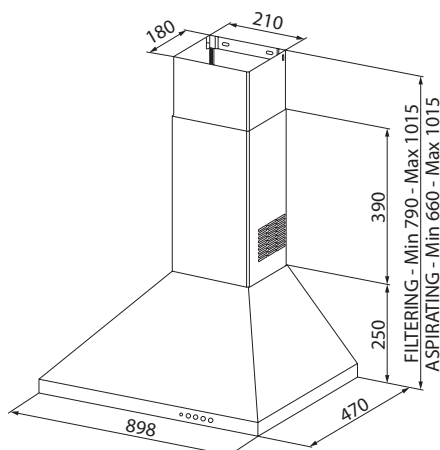


FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM



Dimensions are nominal measurements only.

SPECIFICATIONS

Recommended use	Domestic
Material	Stainless Steel
Colour availability	Stainless Steel
Weight	13.59kg
Dimensions	898 x 470 x 790mm
Width	900mm
Voltage	220-240V / 50Hz
Air Flow	715 m3/h
Noise level (dBa)	48
Lighting	LED 2x1W
Plug	Plug with 3 pins
Switch	Soft touch control
Fan Speeds	3
Filter	Aluminium mesh
Power cord length	1000mm



To see the complete FRANKE range go to
www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners.

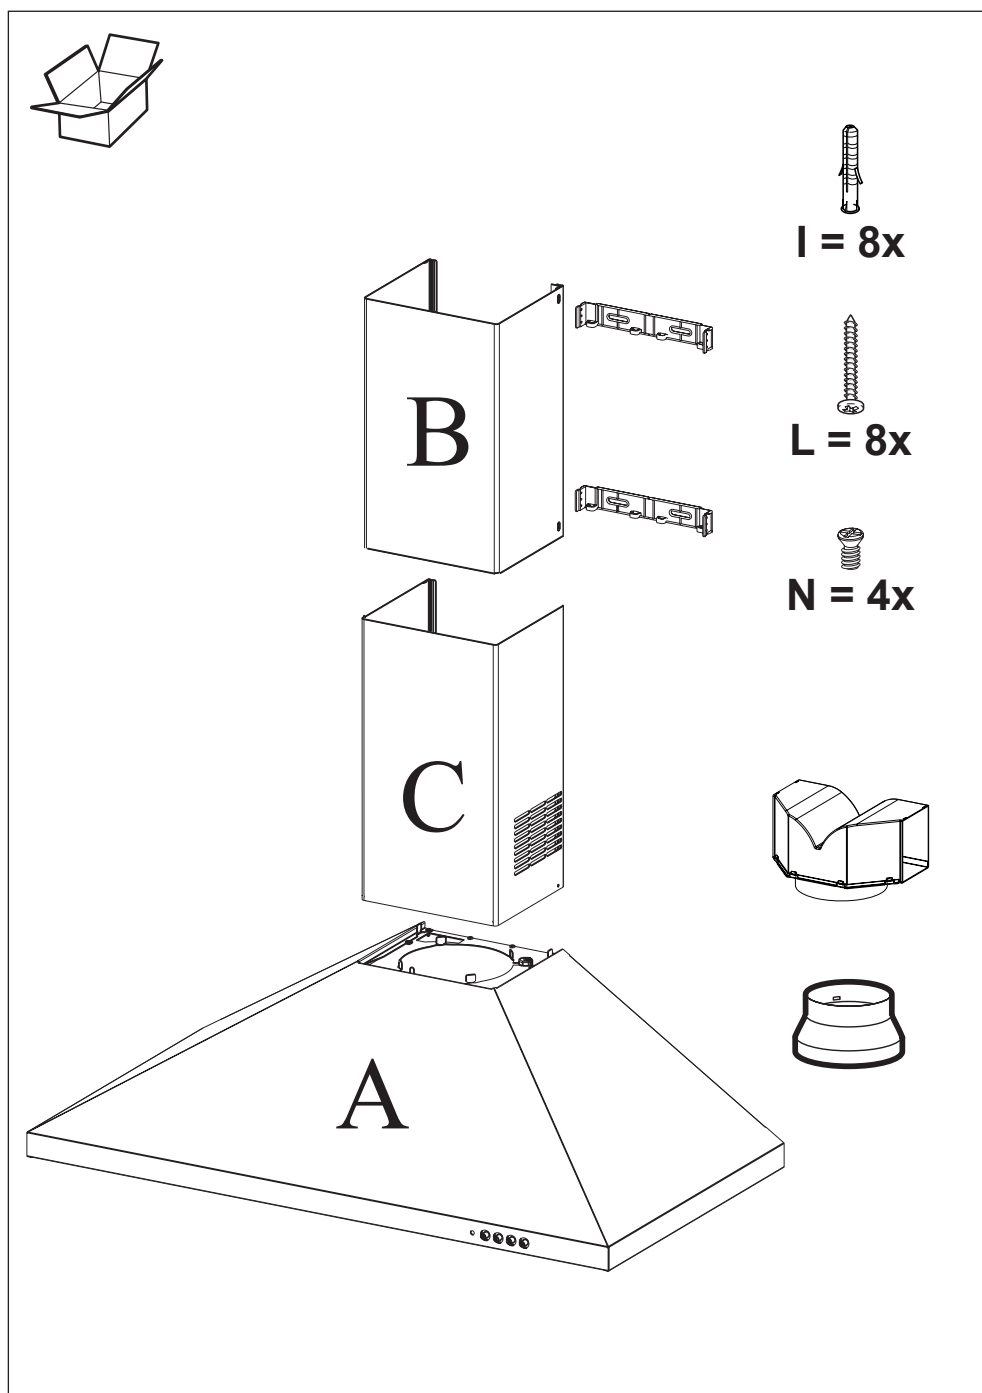
This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**

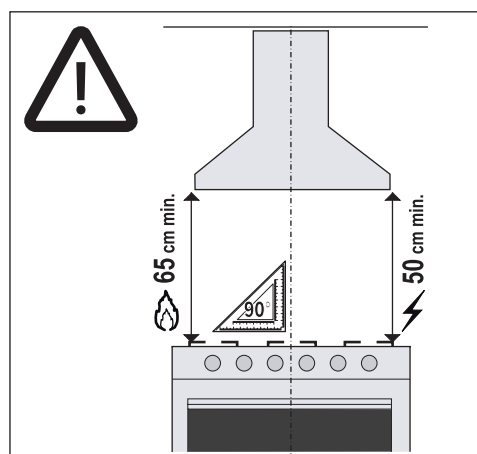
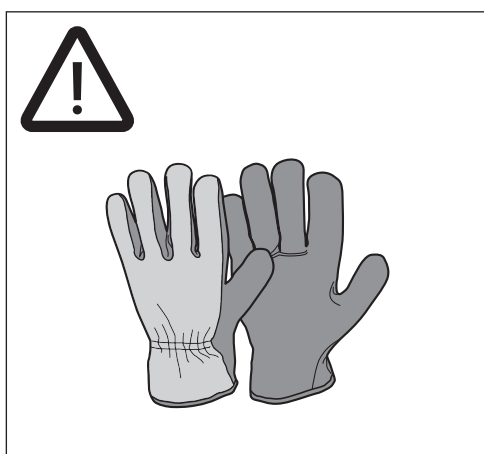
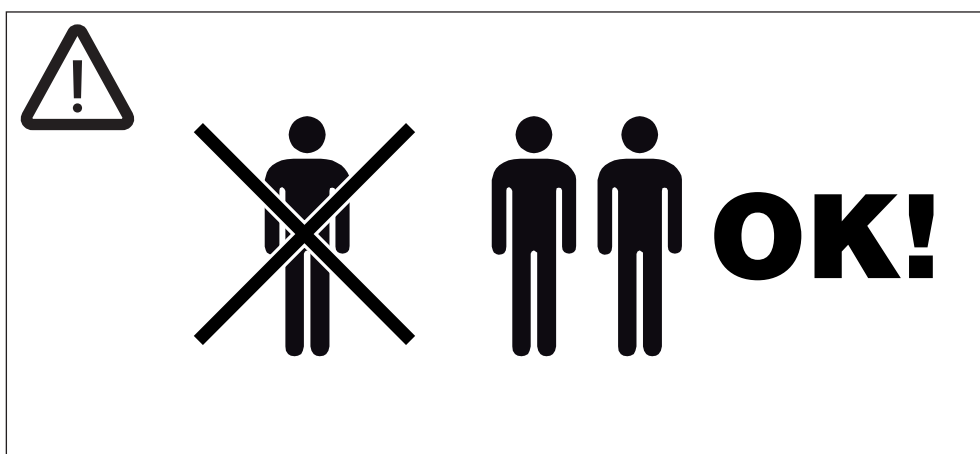
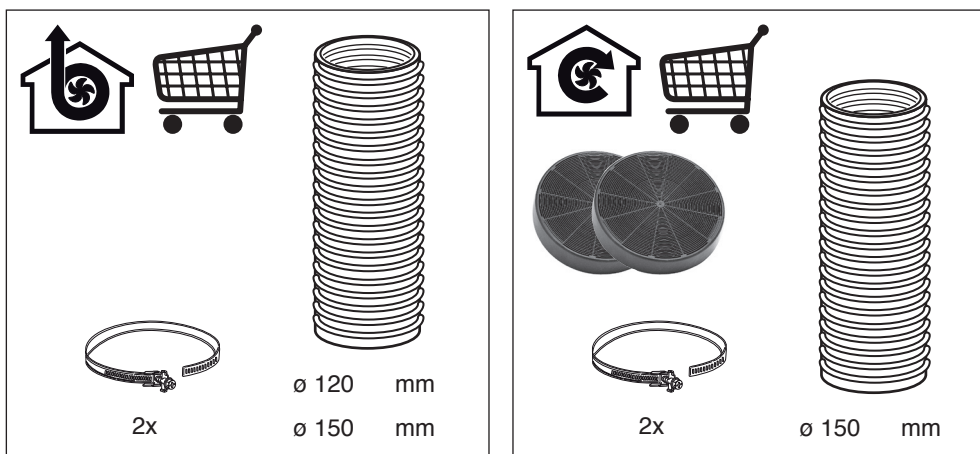
* EN Warning! Before proceeding with installation, read the Recommendations and Suggestions in the User Manual.



Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE**reece**

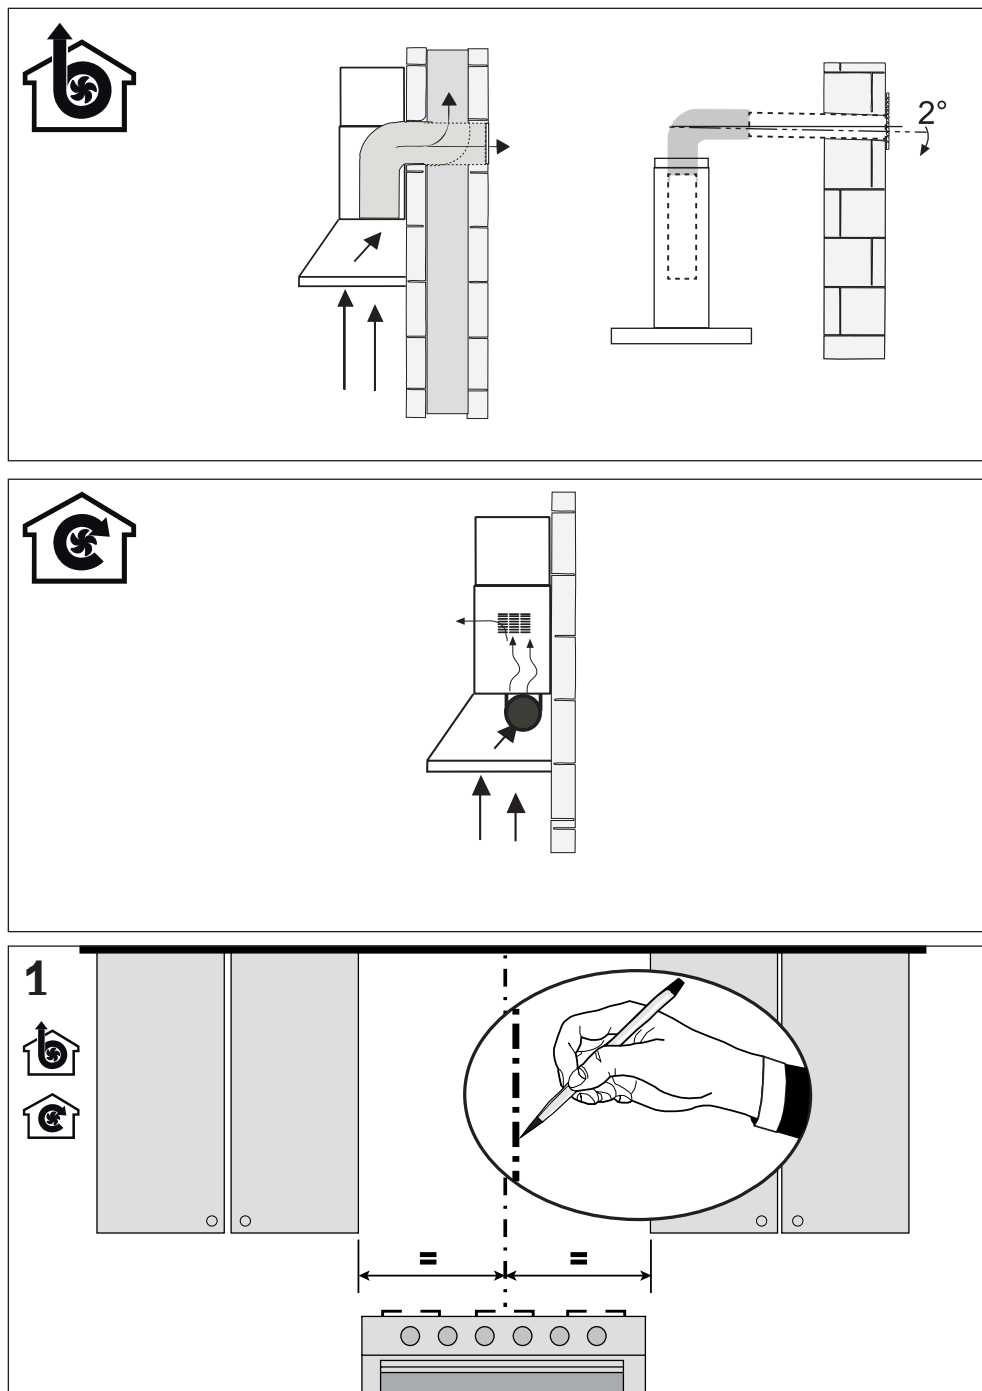
FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE**reece**

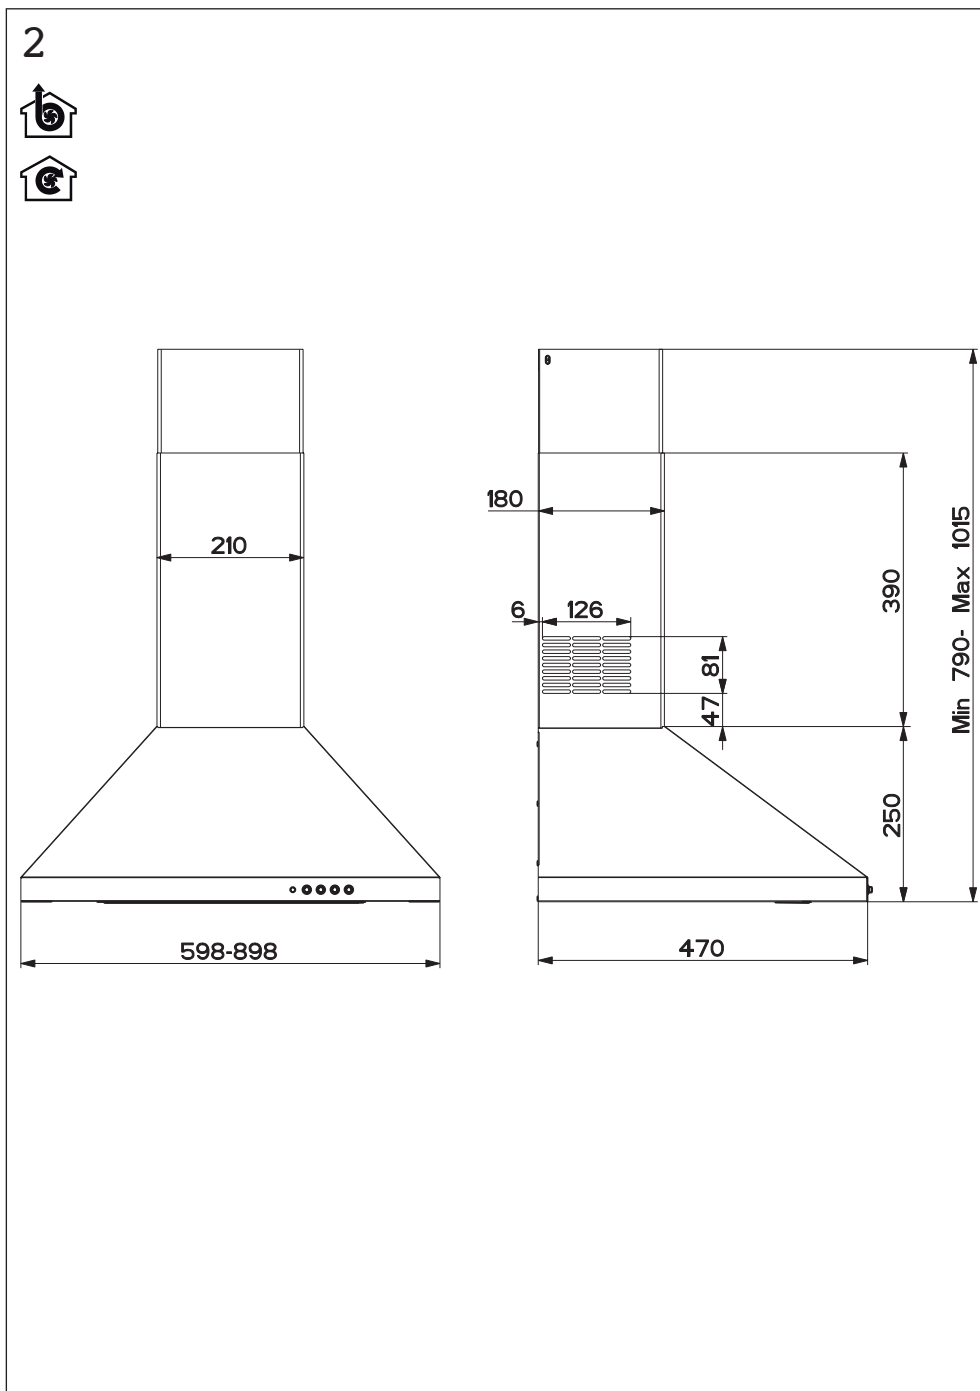
FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE**reece**

FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**

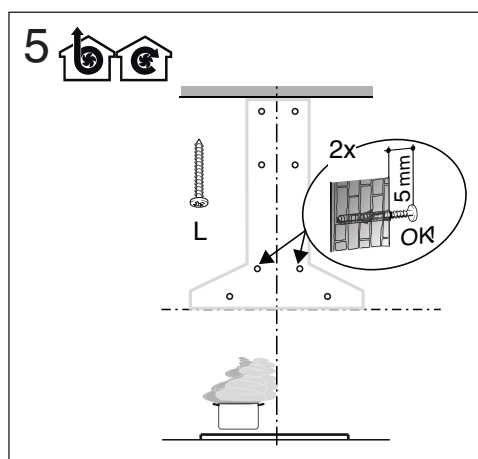
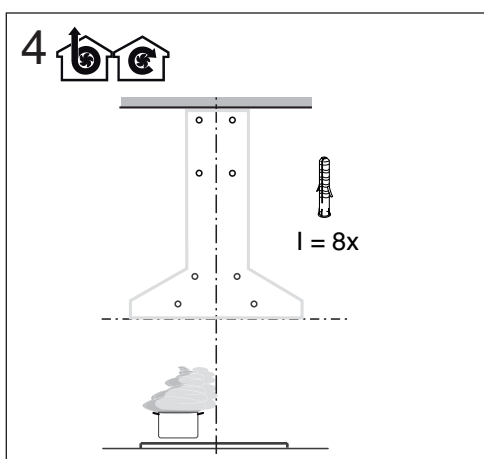
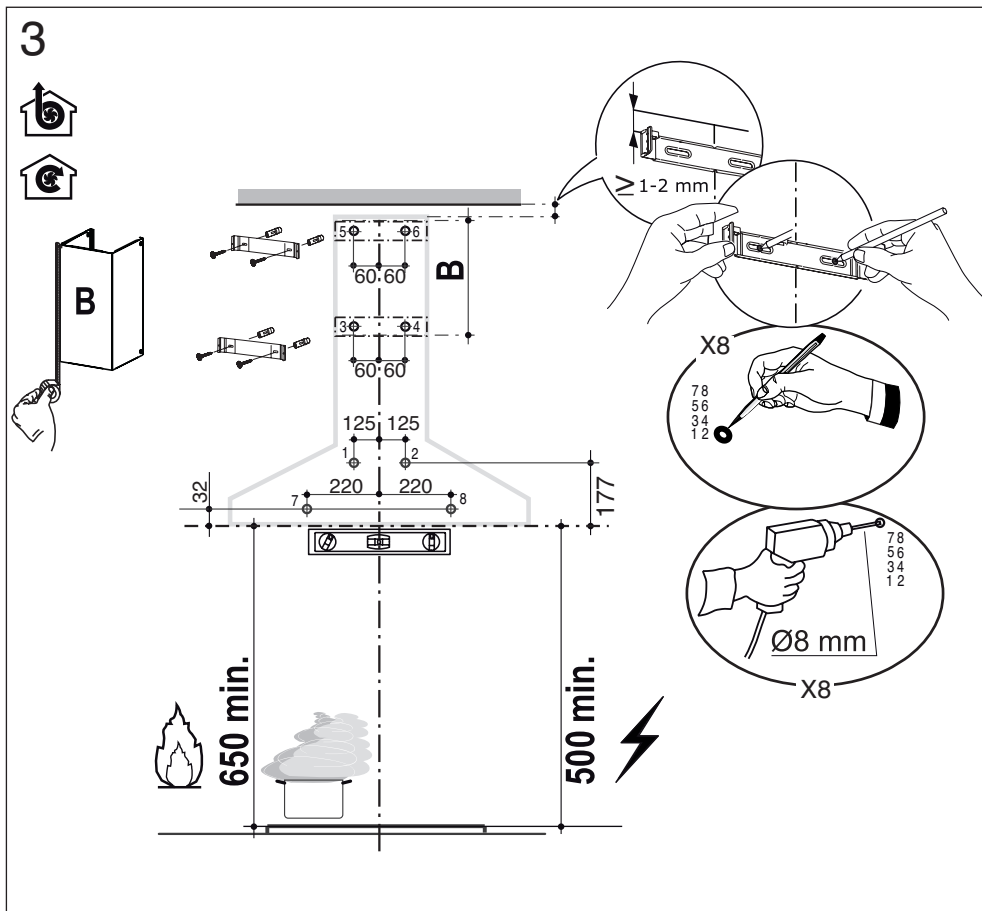
Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE**reece**

FRANKE

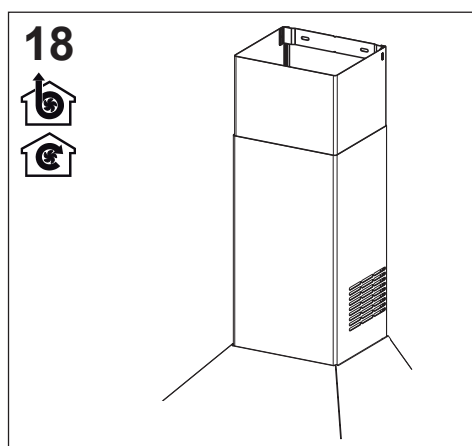
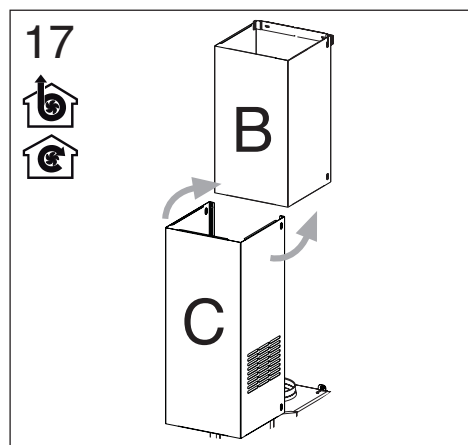
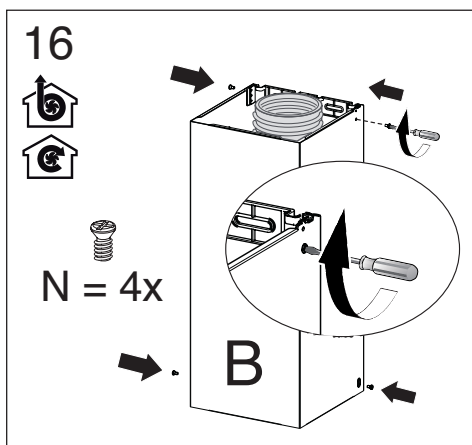
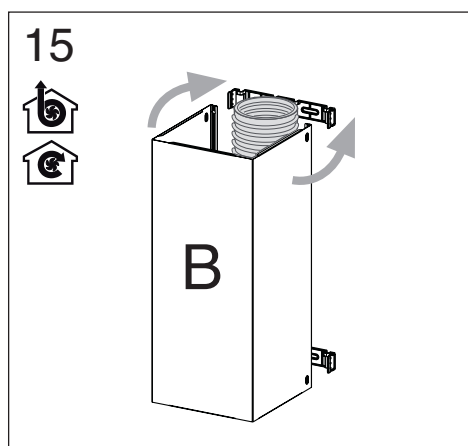
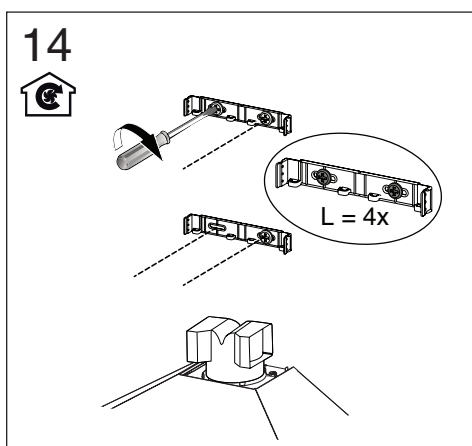
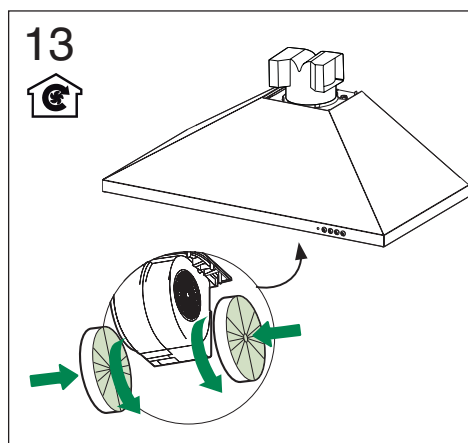
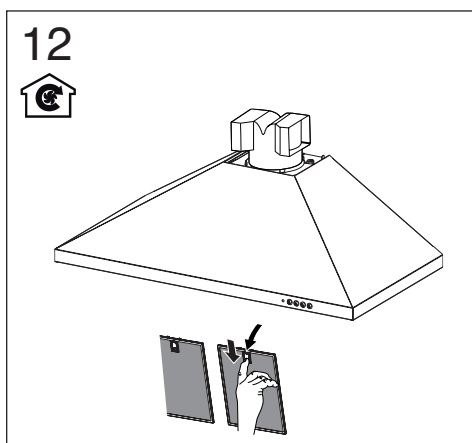
DESIGNER 3FLARE CANOPY RANGEHOOD 90CM

INSTALLATION INSTRUCTIONS



Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

FRANKE**reece**

FRANKE

DESIGNER 3FLARE CANOPY RANGEHOOD 90CM**INSTALLATION INSTRUCTIONS**